


Chrome trim weather shields (with holes) Installation Instruction



Each hole need four fitting parts. Bolt, Locker, metal clip and nut.

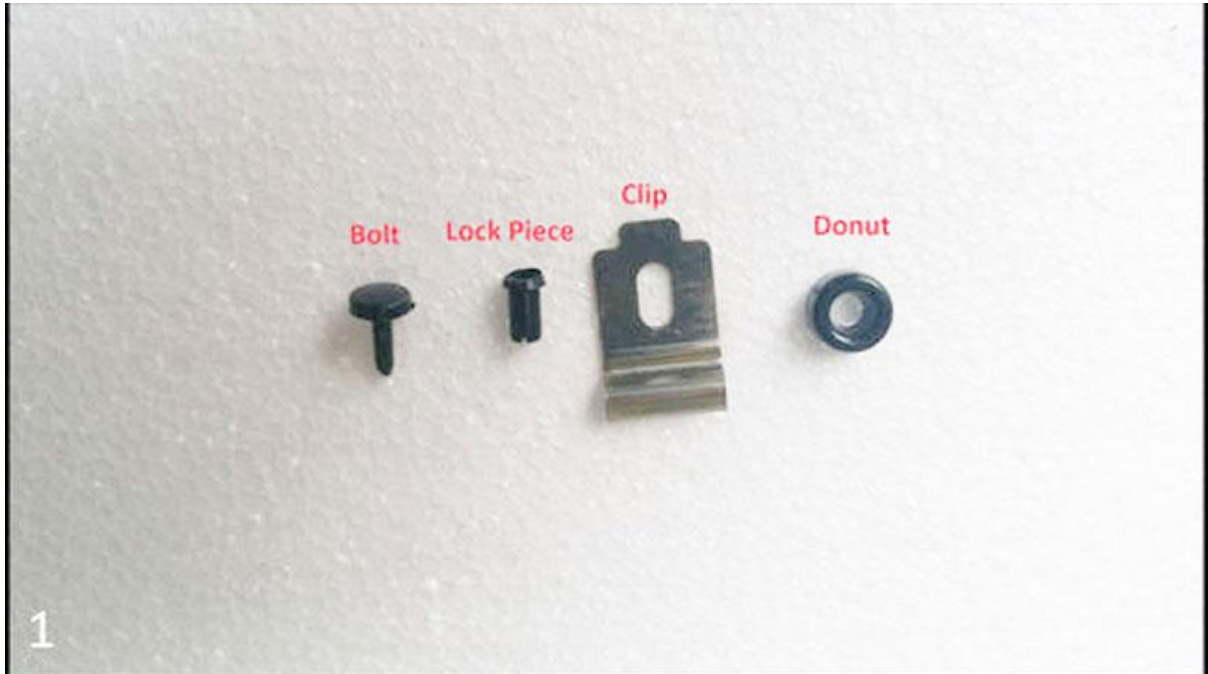

Test-fit the weather shields to check alignment.
Mark down the position of the holes, then put clips in the place.



Use heat gun to heat up the tape, then put on the weather shields.
Place the locker piece into the hole from outside, then through the clip.



Put the bolt into the locker from outside, but do not push in.



Place the nut from inside, the smooth side face inside the car.



Push the bolt all in, make sure the spread the locker and lock into the nut.